



OPERATION INSTRUCTIONS


Fan Operation

Fan Speeds: There are six speed settings. The screen will light up once the touch sensitive control power button has been pressed. The first button beside the screen to the left is the LOW speed setting and on the opposite side is the HIGH speed setting button.

Lights: The first button on the left is the light control.

Clock: To set the clock on the machine, start by turning the machine on. With the power on, press down the power button until the screen begins to flash. Once it begins to flash, set clock by using the HIGH and LOW speed buttons. The LOW speed of the screen controls the hours and the HIGH speed controls the minutes.

Timer: The timer on the machine can be set while the machine is running at the desired speed level. Press down the power button until the screen begins to flash and then use the HIGH/LOW buttons to set your desired timer up to 99 minutes.

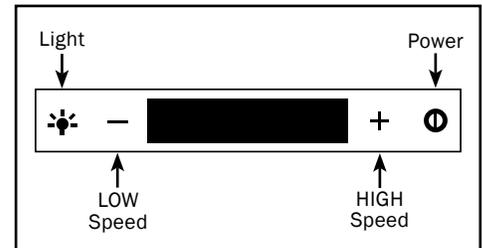


Grease Disposal

WARNING! Ensure that all power leading to your range hood has been disconnected before disassembling any parts.

Remove both baffle filters from the unit to display the grease collector at the back of the machine. Remove the grease collector from the bottom lip of the machine and soak it to clean the grease.

Tip: Soak all parts in soapy water if there is heavy grease.

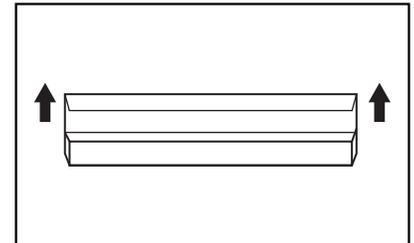


Changing Light bulbs

WARNING! Make sure all electrical power leading to the range hood has been disconnected prior to changing the light bulb.

To change the light bulb, remove light case from the light socket. The light case can be accessed from the inside of the body of the machine.

1. Disconnect the connecting wires of the light socket from the motherboard wires.
2. Remove grease filters and push light case outward away from the machine
3. Once the light case has been detached from the range hood, replace with a new case.


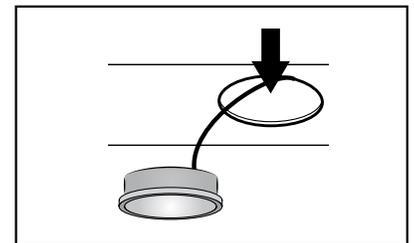


Baffle Filters

Removal: In order to remove the baffle filters pull the baffle filter forwards toward the front of the hood using the handle while pushing the back side upwards inside the hood. With the filter tilted upwards, push the filter backward and then pull down the front to remove the baffle filter.

Disassembly: To disassemble the baffle filter, unscrew the top knob with pliers. Your filter will disassemble into two halves of the filter, the knob, and a nut. The two filter pieces can be cleaned in the bottom rack of the dishwasher.

Reassembly: To reassemble the pieces of the baffle filter, first place the two pieces of the filter against each other. When placing the filter together, ensure that all tabs fit into the slots to keep both pieces of the filter attached. Place the knob and the nut together, then screw the knob into the nut.

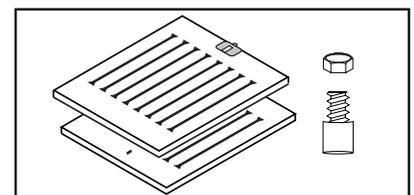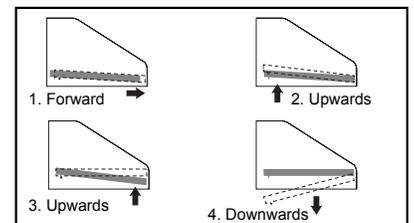


MAINTENANCE

 
Cleaning

Baffle Filters: Disassemble the baffle filter into separate pieces by unscrewing the knob. Removable filters can be cleaned by the dishwasher, or by soaking in the sink.

Exterior: The exterior of the machine can be maintained by wiping the surface area. Use a stainless steel cleaner and a very gentle cloth for stainless steel machines.

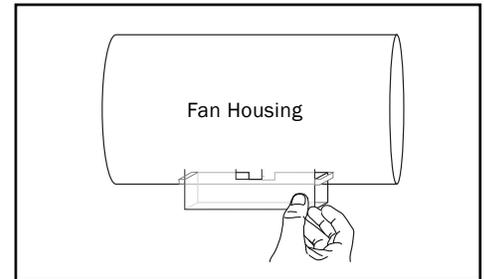

REPLACEABLE PARTS

NAME	QTY	DESCRIPTION	IMAGE
UM 19	1	NA330 Oil Collector	
BFU 13	2	Baffle Filters For 30"	
BFU 14	2	Baffle Filters For 36"	

NAME	QTY	DESCRIPTION	IMAGE
WM 06L	2	LED Light Socket Kit (Includes light, socket, connecting wire)	

FREQUENTLY ASKED QUESTIONS

When do I need a Cyclone Range Hood?

Peoples' cooking habits vary, but getting rid of airborne contaminants and odours which linger in your cooking area is important for everyone. Whether it is steam from cooking soups steaming vegetables, grease and oil from frying food, it is important for everyone to have efficient ventilation in their kitchen.

What is the difference between a round and rectangular opening?

The difference between the two shapes depends on the ductwork in your home, and if applicable, the pre-cut hole in the cabinetry. Our Cyclone Range Hood models with rectangular openings have an additional optional opening in the back of the machine to vent directly out the back, as required in some homes.

Can I install a range hood if my vent does not match the size or shape of the range hood vent?

Our circular vents are 6 inches in diameter, and our rectangular vents are 3 x 10 inches in size. In order to install a Cyclone Range Hood with a different shaped vent, an adapter can be installed to adjust the ducting to the correct shape. This is an additional part that needs to be purchased and installed. Installing a range hood to a larger duct is acceptable, although installing a range hood to a smaller duct work will void the warranty.

Can I install a Cyclone Range Hood myself?

Installing a Cyclone Range Hood is fairly straightforward, and we provide detailed installation instructions. We do not recommend range hood installation for novices to electrical or handy work.

What is the minimum mounting height between the range top to hood bottom?

The minimum mounting height between the range top to hood bottom should be no less than 30". The maximum mount height should be no more than 36". The hood must be installed at the correct mounting height. Hoods mounted too low can result in heat damage, and hoods mounted too high will have impaired performance.

How often do I clean my Cyclone Range Hood?

Cyclone recommends that our range hoods are cleaned at least once every month. However, cooking habits differ and cleaning should reflect the frequency and intensity of cooking.