
# Over the Range Microwave Oven

Questions? Call X-XXX-XXXX(US) or X-XXX-XXXX(Canada)

#### **BEFORE YOU BEGIN**

Read these instructions completely and carefully.

- **IMPORTANT** Save these instructions for local inspector's use.
- IMPORTANT Observe all governing codes and ordinances.
- **Note to Installer** Be sure to leave these instructions with the Consumer.
- **Note to Consumer** Keep these instructions for future reference.
- **Skill level** Installation of this appliance requires basic mechanical and electrical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the Warranty.

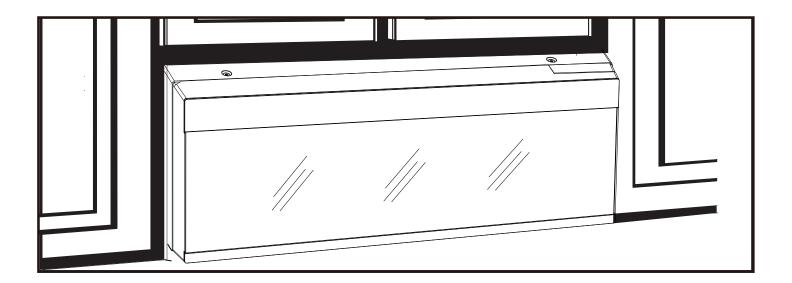


READ CAREFULLY.
KEEP THESE INSTRUCTIONS.

CONTENTS
General information
Important Safety Instructions
Electrical Requirements
Damage - Shipment/Installation
Parts Included
Tools You Will Need
Mounting Space
Step-by-step installation guide
Placement of The Mounting Plate 6-8
Removing the Mounting Plate 6
Finding the Wall Studs6
Determining Wall Plate Location
Aligning the Wall Plate8
Installation Types
A Recirculating
Attach Mounting Plate to Wall10
Preparation of Top Cabinet11
Check Blower Plate1.1
Mount the Microwave Oven11-12
Installing or Change the
Charcoal Filter 12-13
Hood Exhaust
B Outside Back Exhaust 15–18
Preparing Rear Wall for Outside Back Exhaust15
Remove Blower Plate 15
Attach Mounting Plate to Wall16
Preparation of Top Cabinet16
Adapting Microwave Blower for Outside Back Exhaust16 –17
Mount the Microwave Oven18

C Outside Top Exhaust
Attach Mounting Plate to Wall19
Preparation of Top Cabinet20
Adapting Microwave Blower for
Outside top Exhaust 20-21
Checking for Proper Damper Operation21
Mount the Microwave Oven21-22
Adjust the Exhaust Adaptor22
Connecting Ductwork22
Before You Use Your Microwave23

#### IMPORTANT SAFETY INSTRUCTIONS

This product requires a three-prong grounded outlet. The installer must perform a ground continuity check on the power outlet box before beginning the installation to ensure that the outlet box is properly grounded. If not properly grounded, or if the outlet box does not meet electrical requirements noted (under ELECTRICAL REQUIREMENTS), a qualified electrician should be employed to correct any deficiencies.

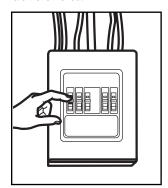


CAUTION: For personal safety, remove house fuse or open circuit breaker before beginning installation to avoid severe or fatal shock injury.

CAUTION: For personal safety, the mounting surface must be capable of supporting the cabinet load, in addition to the added weight of this 63–85 pound (28.5–38.5 kg) product, plus additional oven loads of up to 50 pounds (22.7 kg) or a total weight of 113–135 pounds (51.3–61.2 kg).

CAUTION: For personal safety, this product cannot be installed in cabinet arrangements such as an island or a peninsula. It must be mounted to BOTH a top cabinet AND a wall.

NOTE: For easier installation and personal safety, it is recommended that two people install this product.

IMPORTANT – PLEASE READ CAREFULLY. FOR PERSONAL SAFETY, THIS APPLIANCE MUST BE PROPERLY GROUNDED TO AVOID SEVERE OR FATAL SHOCK.

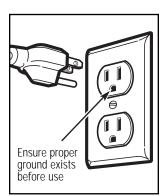

The power cord of this appliance is equipped with a three-prong (grounding) plug which mates with a standard three-prong (grounding) wall receptacle to minimize the possibility of electric shock hazard from this appliance.

You should have the wall receptacle and circuit checked by a qualified electrician to make sure the receptacle is properly grounded.

Where a standard two-prong wall receptacle is encountered, it is very important to have it replaced with a properly grounded three-prong wall receptacle, installed by a qualified electrician.

DO NOT, UNDER ANY CIRCUMSTANCES, CUT, DEFORM OR REMOVE ANY OF THE PRONGS FROM THE POWER CORD. DO NOT USE WITH AN EXTENSION CORD.

# ELECTRICAL REQUIREMENTS

Product rating is 120 volts AC, 60 Hertz, 15 amps and 1.6 kilowatts. This product must be connected to a seperate and dedicated supply circuit of the proper voltage and frequency. Wire size must conform to the requirements of the National Electrical Code or the prevailing local code for this kilowatt rating. The power supply cord and plug should be brought to a seperate and dedicated 15- to 20- ampere branch circuit single grounded outlet. The outlet box should be located in the cabinet above the microwave oven. The outler box and supply circuit should be installed by a qualifed electrician and conform to the National Electrical Code or the prevailing local code.

# DAMAGE—SHIPMENT/INSTALLATION

- If the unit is damaged in shipment, return the unit to the store in which it was bought for repair or replacement.
- If the unit is damaged by the customer, repair or replacement is the responsibility of the customer.
- If the unit is damaged by the installer (if other than the customer), repair or replacement must be made by arrangement between customer and installer.

#### **PARTS INCLUDED**

#### HARDWARE PACKET

PART	QUANTITY	
	Wood Screws (1/4" x 2")	2
	Toggle Bolts (and wing nuts) (¾6" x 3")	2
	Self-Aligning Machine Screws (¼"-28 x 3½")	3
CONTRACTOR	Nylon Grommet (for metal cabinets)	1

You will find the installation hardware contained in a packet with the unit. Check to make sure you have all these parts.

NOTE: Some extra parts are included.


## PARTS INCLUDED (CONT.) ADDITIONAL PARTS

PART	QUANTITY	
	Top Cabinet Template	1
	Rear Wall Template	1
INSTALLATION USE & CARE MANUAL	Installation Instructions	1
	Use & Care Manual	1
	Separately Packed Grease Filters	2
	Exhaust adaptor	1
(3)	Glass Tray	1
	Turntable Ring	1

## Tools you will need:

- Tape measure
- Hole saw
- · Stud finder or hammer
- Level
- Duct and masking tape
- Scissors

- #1 Phillips screw driver
- Electric drill
- 3/16", 1/2", 5/8" drill bit
- Filler wood blocks for recessed bottom cabinets
- Tin snips

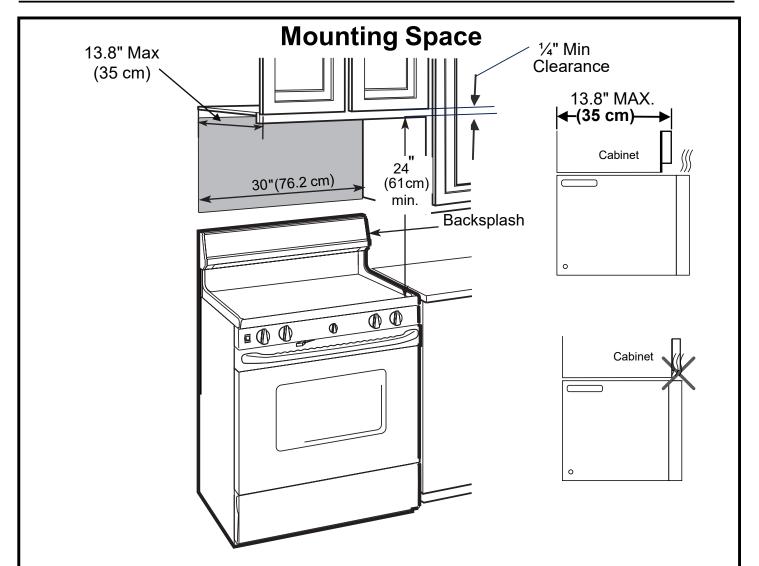


- The space between the cabinets must be 30" (76.2 cm) wide and free of obstructions.
- If you are going to vent your microwave oven to the outside, see Hood Exhaust Section for exhaust duct preparation
- When installing the microwave oven beneath smooth, flat cabinets, be careful to follow the instructions on the top cabinet template for power cord clearance.
- As a guide to installation, see page 26 for Mounting Template Information.
- If the cabinet depth, including the cabinet doors, is more than 13.8", then the unit must be spaced out from wall using adequate materials supporting 150 lbs to allow proper top vent air exhaust/intake.

### 1


#### PLACEMENT OF THE MOUNTING PLATE

# A. REMOVING THE MICROWAVE OVEN FROM THE CARTON/ REMOVING THE MOUNTING PLATE

Remove the installation instructions, use and care, exhaust adapter, turntable ring, filters, glass tray and the small hardware bag. Do not remove the Styrofoam protecting the top of the oven. please note: Do Not Remove plastic plug protective cover until just before hanging the unit. Keep the unit at least 8 inches away from the counter top edge to prevent dropping because of the heavy door

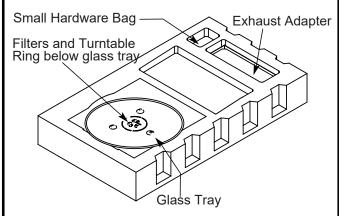


**2** Fold back all 4 carton flaps fully against carton sides. Then carefully roll the oven and carton over onto the top side. The oven should be resting in the Styrofoam.

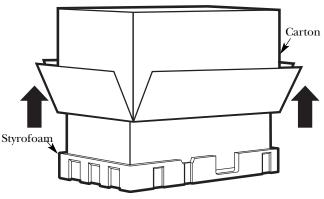


**3** Pull the carton up and off the oven.

Cut the middle of the outer protective plastic bag to remove the mounting plate

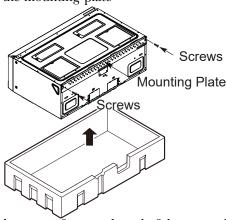

Remove the screws from each end of the mounting plate. This plate will be used as the rear wall template and for mounting. Reinstall the screws into the holes where they were removed.


## B. FINDING THE WALL STUDS

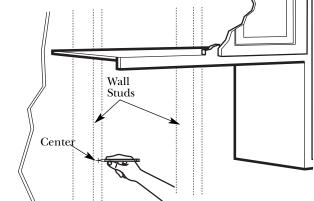



- 1 Find the studs, using one of the following methods:
  - A. Stud finder a magnetic device which locates nails.
  - B. Use a hammer to tap lightly across the mounting surface to find a solid sound. This will indicate a stud location.
- After locating the stud(s), find the center by probing the wall with a small nail to find the edges of the stud. Then place a mark halfway between the edges. The center of any adjacent studs should be 16" (40.6 cm) or 24" (61 cm) from this mark.
- **3** Draw a line down the center of the studs.

THE MICROWAVE MUST BE CONNECTED TO AT LEAST ONE WALL STUD.

#### C. DETERMINING WALL PLATE LOCATION UNDER YOUR CABINET

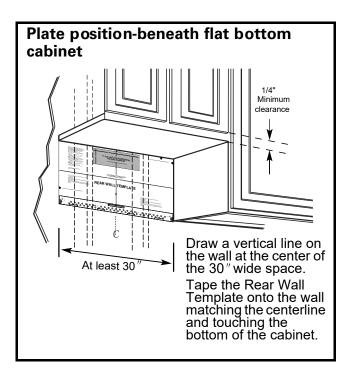

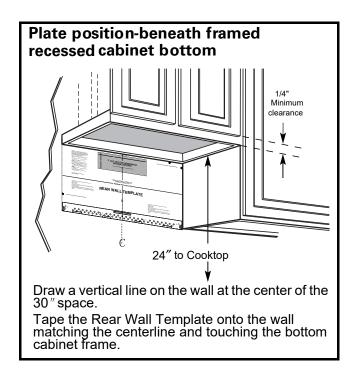

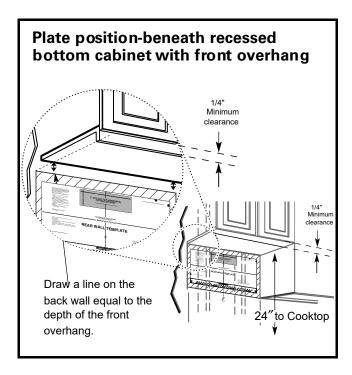


Your cabinets may have decorative trim that interferes with the microwave installation. Remove the decorative trim to install the microwave properly and to make it level.

#### THE MICROWAVE MUST BE LEVEL.

Use a level to make sure the cabinet bottom is level. If the cabinets have a front overhang only, with no back or side frame, install the mounting plate down the same distance as the front overhang depth. This will keep the microwave level.

- 1 Measure the inside depth of the front overhang.
- Draw a horizontal line on the back wall an equal distance below the cabinet bottom as the inside depth of the front overhang.
- **3** For this type of installation with front overhang only, align the mounting tabs with this horizontal line, not touching the cabinet bottom as described in Step D.

#### D. ALIGNING THE WALL PLATE

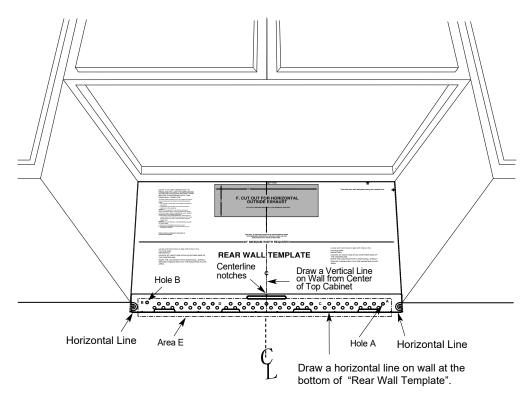

- 1 Draw a vertical line on the wall at the center of the 30" wide space.
- 2 Draw a horizontal line on the wall at the bottom of "Rear Wall Template".
- Find a wall stud in area "E" of mounting plate Refer to section 1B. Finding the wall studs.
- 4 For attaching the mounting plate into stud drill a 3/16" hole into wood stud. Drill a 5/8" hole for toggle bolt in 1 other location (Hole A or Hole B) NOTE: DO NOT MOUNT THE PLATE AT THIS TIME.

**NOTE:** Holes A and B are inside area E. If neither of Holes A and B are not in a stud, find a stud somewhere in area E and draw a circle to line up with the stud. It is important to have **at least one wood screw** mounted **firmly in a stud** to support the weight of the microwave. **Set the mounting plate aside**.

## 2

#### **INSTALLATION TYPES** (Choose A, B or C)


This microwave oven is designed for adaptation to the following three types of ventilation:

- A. Recirculating (Non-Vented Ductless)
- B. Outside Back Exhaust (Horizontal Duct)
- C. Outside Top Exhaust (Vertical Duct)

**NOTE:** This microwave is shipped assembled for Recirculating. Select the type of ventilation required for your installation and proceed to that section.

## Α


## RECIRCULATING (NON-VENTED DUCTLESS)

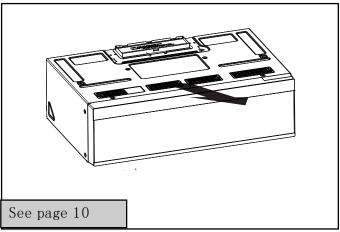


Models are shipped for recirculating exhaust.

Some models have a disposable charcoal filter installed to help remove smoke and odors.

## B OUTSIDE BACK EXHAUST (HORIZONTAL DUCT)

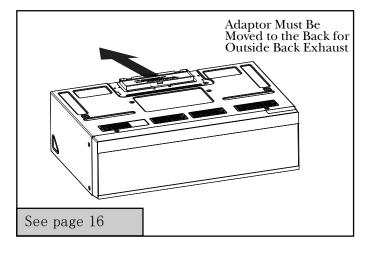

# OUTSIDE TOP EXHAUST (VERTICAL DUCT)

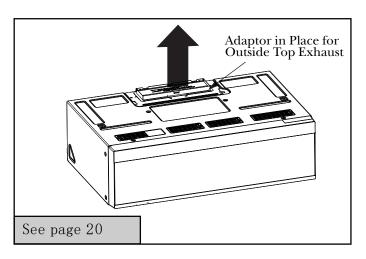

NOTE: Read the pages 14-15 only if you plan to vent your exhaust to the outside. If you plan to recirculate the air back into the room, proceed to page 10.




#### **RECIRCULATING** (Non-Vented Ductless)

#### INSTALLATION OVERVIEW


- A1. Attach Mounting Plate to Wall
- **A2.** Prepare Top Cabinet
- A3. Check Blower Plate
- A4. Mount the Microwave Oven
- A5. Install or change Charcoal Filter

#### **IMPORTANT NOTES:**

- Make sure the screws for the blower motor and blower plate are securely tightened when they are reinstalled. This will help to prevent excessive vibration.
- Make sure the motor wiring has been properly routed and secured, and that the wires are not pinched.

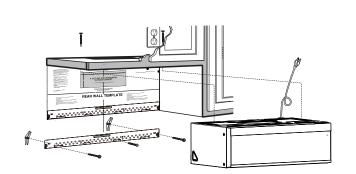


# A1. ATTACH THE MOUNTING PLATE TO THE WALL

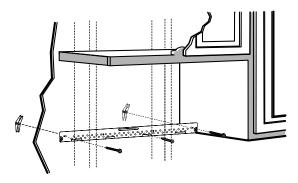


Attach the plate to the wall using toggle bolts. At least one wood screw must be used to attach the plate to a wall stud.

NOTE: If the cabinet depth including the cabinet doors is more than 13" then the unit must be spaced out from wall using adequate materials supporting 150 lbs to allow proper top vent air exhaust/intake.

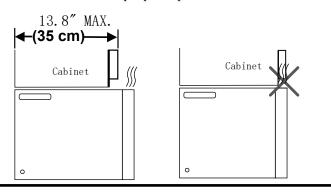

- **1** Remove the toggle wings from the bolts.
- Insert the bolts into the mounting plate through the holes designated to go into drywall and reattach the toggle wings to ¾" (19 mm) onto each bolt.

#### To use toggle bolts:

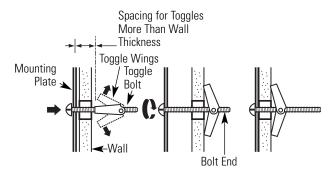

Place the mounting plate against the wall and insert the toggle wings into the holes in the wall to mount the plate.


**NOTE:** Before tightening toggle bolts and wood screw, make sure the bottom of the mounting plate touch the bottom of the cabinet when pushed flush against the wall and that the plate is properly centered under the cabinet.

**CAUTION:** Be careful to avoid pinching fingers between the back of the mounting plate and the wall.

Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.

# A2. USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET

You need to drill holes for the top support screws and a hole large enough for the power cord to fit through.

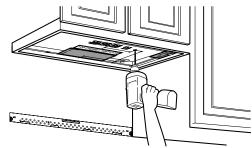


- Read the instructions on the TOP CABINET TEMPLATE.
- Tape it underneath the top cabinet.

**NOTE:**Adjust top template accordingly if the microwave is being spaced out from the wall due to cabinet depth (including cabinet doors) of more than 13".

 Drill the holes, following the instructions on the TOP CABINET TEMPLATE.

**CAUTION:** Wear safety goggles when drilling holes in the cabinet bottom.

#### A3. CHECK BLOWER PLATE

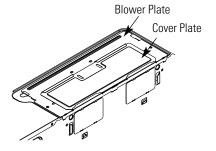

- Place the microwave in its upright position, with the top of the unit facing up.
- Check to see that the blower plate and cover plate are correctly installed on the unit.

#### A4. MOUNT THE MICROWAVE OVEN



FOR EASIER INSTALLATION AND PERSONAL 'SAFETY, WE RECOMMEND THAT TWO PEOPLE INSTALL THIS MICROWAVE OVEN.

IMPORTANT: Do not grip or use the handle or heat shield during installation. Do not remove the cardboard spacers between the heat shield and door.

**NOTE:** If your cabinet is metal, use the nylon grommet around the power cord hole to prevent cutting of the cord.


**NOTE:** We recommend using filler blocks if the cabinet front hangs below the cabinet bottom shelf.

IMPORTANT: If filler blocks are not used, case damage may occur from overtightening screws.


NOTE: When mounting the microwave oven, thread power cord through hole in bottom of top cabinet. Keep it tight throughout Steps

1–3. Do not pinch cord or lift oven by pulling cord.


1 Lift microwave, tilt it forward, and hook slots at back bottom edge onto four lower tabs of mounting

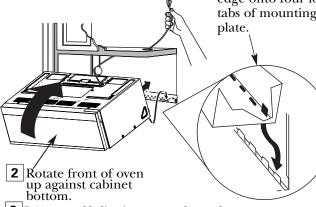

Insert a self-aligning screw through top center cabinet hole. Temporarily secure the oven by turning the screw at least two full turnsafter the threads have engaged. (It will be completely tightened later.) Be sure to keep power cord tight. Be careful not to pinch the cord, especially when mounting flush to bottom of cabinet.

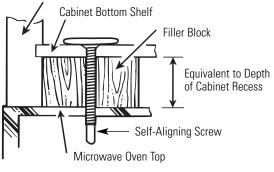

4 Attach the microwave oven to the top cabinet.

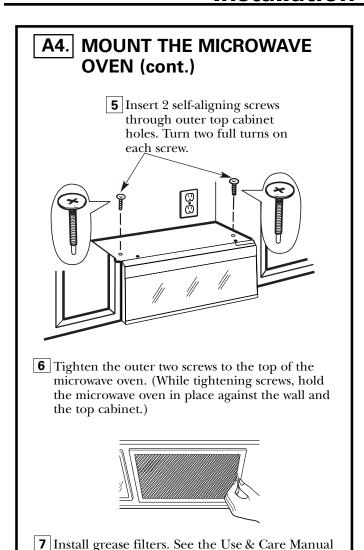


# A5. INSTALLING OR CHANGE THE CHARCOAL FILTER (Some Models)

packed with the microwave.

NOTE: The charcoal filter is factory installed in some models. Refer to the Use and Care to see if yours is factory installed and for replacement information.

For models without the recirculation filter access door, follow these steps to replace or install a charcoal filter.

**A 5.1** Unplug microwave oven or disconnect power.

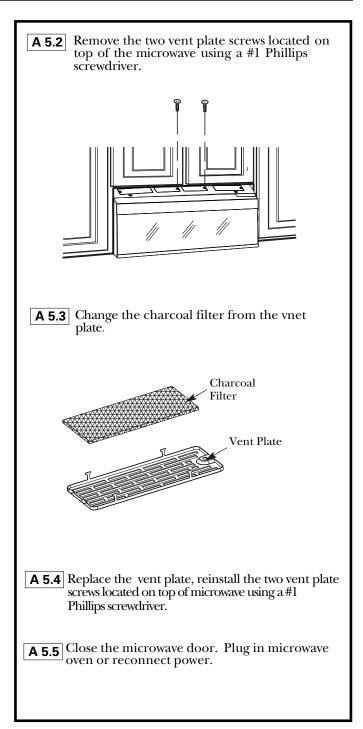

#### INSTALLATION INSTRUCTIONS FOR EXTERNAL EXHAUST DUCTING

**NOTE:** If you need to install ducts, note that the total duct length of  $3\frac{1}{4}$ " x 10" (8.2 x 25.4 cm) rectangular or 5" (12.7 cm) diameter/ 6" (15.2 cm) diameter round duct should not exceed 140 equivalent feet (42.7 m).

Outside ventilation requires an EXTERNAL EXHAUST DUCT.Read the following carefully.

**NOTE:** It is important that venting be installed using the most direct route and with as few elbows as possible. This ensures clear venting of exhaust and helps prevent blockages. Also, make sure dampers swing freely and nothing is blocking the ducts.

#### **Exhaust connection:**

The exhaust adaptor has been designed to mate with a standard  $3\frac{1}{4}$ " x 10" (8.2 x 25.4 cm) rectangular duct.

If a round duct is required, a rectangular-to-round transition adaptor must be used. A 5""" (12.7cm)/6" (diameter duct is acceptable to use.

#### Maximum duct length:

For satisfactory air movement, the total duct length of  $3\frac{1}{4}$ " x 10" (8.2 x 25.4 cm) rectangular or 5" (12.7 cm) diameter/6" (15.2 cm) diameter round duct **should not exceed 140 equivalenteet (42.7 m).** 

Elbows, transitions, wall and roof caps,

**etc.,** present additional resistance to airflow and are equivalent to a section of straight duct which is longer than their actual physical size. When calculating the total duct length, add the equivalent lengths of all transitions and adaptors plus the length of all straight duct sections. The chart below shows you how to calculate total equivalent ductwork length using the approximate feet of equivalent length of some typical ducts.

(15.2cm)

DUCT PIECES		EQUIVALENT LENGTH	х	NUMBER USED	=	EQUIVALENT LENGTH
	Rectangular-to-Round Transition Adaptor*	5 Ft. (1.5 m)	Х	( )	=	Ft. or m
	Wall Cap	40 Ft. (12.2 m)	X	( )	=	Ft. or m
	90° Elbow	10 Ft. (3 m)	Х	( )	=	Ft. or m
	45° Elbow	5 Ft. (1.5 m)	Х	( )	=	Ft. or m
	90° Elbow	25 Ft. (7.6 m)	Х	( )	=	Ft. or m
	45° Elbow	5 Ft. (1.5 m)	X	( )	=	Ft. or m
	Roof Cap	24 Ft. (7.3 m)	Х	( )	=	Ft. or m
	Straight Duct 6" (15.2 cm) Round or 31/4" x 10" (8.2 x 25.4 cm Rectangular)	1 Ft. (0.3 m)	Х	( )	=	Ft. or m
		Total Ductwork			=	Ft. or m



<sup>\*</sup> IMPORTANT: If a rectangular-to-round transition adaptor is used, the bottom corners of the damper will have to be cut to fit, using the tin snips, in order to allow free movement of the damper.

Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood.

#### **EXTERNAL EXHAUST DUCTING**

#### **OUTSIDE TOP EXHAUST (EXAMPLE ONLY)**

The following chart describes an example of one possible ductwork installation.




DUCT PIECES		EQUIVALENT LENGTH	х	NUMBER USED	=	EQUIVALENT LENGTH
	Roof Cap	24 Ft. (7.3 m)	Х	(1)	=	24 Ft. (7.3 m)
(11111)	12 Ft. (3.6 m) Straight Duct (6"/15.2 cm Round)	12 Ft. (3.6 m)	Х	(1)	=	12 Ft. (3.6 m)
	Rectangular-to-Round Transition Adaptor*	5 Ft. (1.5 m)	х	(1)	=	5 Ft. (1.5 m)
Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood.			Total Length	ı =	41 Ft. (12.5 m)	

<sup>\*</sup> IMPORTANT: If a rectangular-to-round transition adaptor is used, the bottom corners of the damper will have to be cut to fit, using the tin snips, in order to allow free movement of the damper.

#### **OUTSIDE BACK EXHAUST (EXAMPLE ONLY)**

The following chart describes an example of one possible ductwork installation.

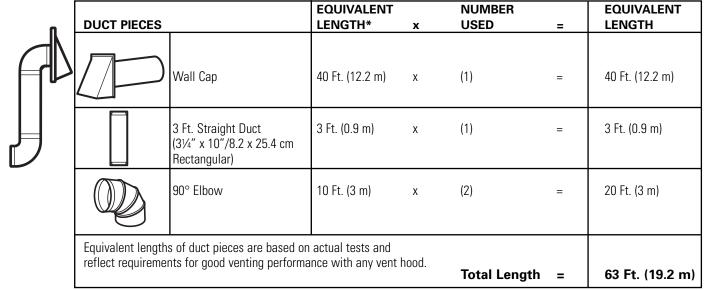

**NOTE:** For back exhaust, care should be taken to align exhaust with space between studs, or wall should be prepared at the time it is constructed by leaving enough space between the wall studs to accommodate exhaust.

## В


### **OUTSIDE BACK EXHAUST (Horizontal Duct)**

#### **INSTALLATION OVERVIEW**

- **B1.** Prepare Rear Wall
- **B2.** Remove Blower Plate
- **B3.** Attach Mounting Plate to Wall
- **B4.** Prepare Top Cabinet
- **B5.** Adjust Blower
- **B6.** Mount the Microwave Oven


#### **IMPORTANT NOTES:**

- Make sure the screws for the blower motor and blower plate are securely tightened when they are reinstalled. This will help to prevent excessive vibration.
- Make sure the motor wiring has been properly routed and secured, and that the wires are not pinched.

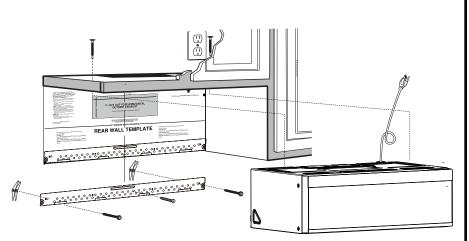

## B1. PREPARING THE REAR WALL FOR OUTSIDE BACK EXHAUST


You need to cut an opening in the rear wall for outside exhaust.

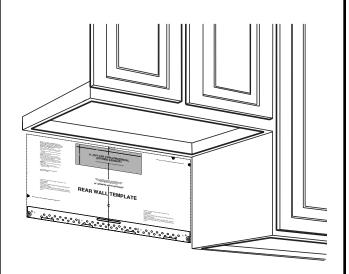

- Read the instructions on the REAR WALL TEMPLATE.
- Tape it to the rear wall.
- Cut the opening, following the instructions of the REAR WALL TEMPLATE.


#### **B2.** REMOVE BLOWER PLATE

Remove and save the screw that holds the blower plate to the microwave. Lift off the blower plate.

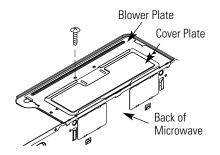

• The cover plate is installed with the blower plate, not need to unintall.


## B3. ATTACH THE MOUNTING PLATE TO THE WALL

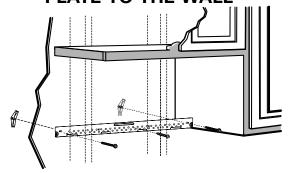

Attach the plate to the wall using toggle bolts. At least one wood screw must be used to attach the plate to a wall stud.

- **1** Remove the toggle wings from the bolts.
- Insert the bolts into the mounting plate through the holes designated to go into drywall and reattach the toggle wings to 34" (19 mm) onto each bolt.

#### To use toggle bolts:

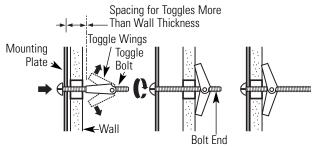

**3** Place the mounting plate against the wall and insert the toggle wings into the holes in the wall to mount the plate.


**NOTE:** Before tightening toggle bolts and wood screw, make sure the bottom of the mounting plate touch the bottom of the cabinet when pushed flush against the wall and that the plate is properly centered under the cabinet.

**CAUTION:** Be careful to avoid pinching fingers between the back of the mounting plate and the wall.

Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.

# B4. USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET

You need to drill holes for the top support screws and a hole large enough for the power cord to fit through.

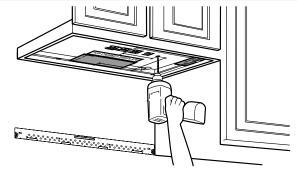


- Read the instructions on the TOP CABINET TEMPLATE.
- Tape it underneath the top cabinet.
- Drill the holes, following the instructions on the TOP CABINET TEMPLATE.


**CAUTION:** Wear safety goggles when drilling holes in the cabinet bottom.


# B5. ADAPTING MICROWAVE AIR DIRECTOR FOR OUTSIDE BACK EXHAUST

**1** Carefully pull out the air director.

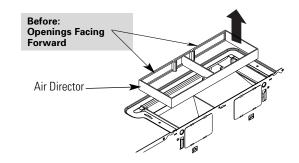


**2** Rotate the air director counterclockwise 180°






Remove the knockout plates in the back of the unit with snips. (For some models)




Knockout Plates: Snip all 4 webs on each knockout panel and remove the metal knockouts for rear airflow. Please take care to remove any sharp edges created from removing the knockout plates.

# B5. ADAPTING MICROWAVE BLOWER FOR OUTSIDE BACK EXHAUST (cont.)


**4** Place the air director back into the opening.

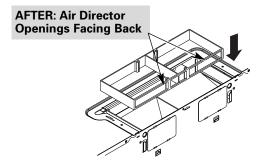

**5** Secure the blower plate to the microwave with the original screw.

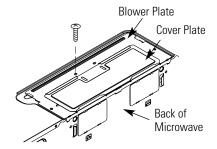

6 Attach the exhaust adaptor to the rear of the oven by sliding it into the guides at the top center of the back of the oven.

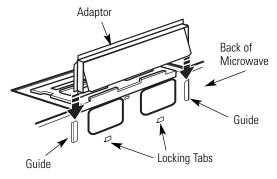

Push in securely until it is in the lower locking tabs. Take care to assure that the damper hinge is installed so that it is at the top and that the damper swings freely.

## B6. MOUNT THE MICROWAVE OVEN



FOR EASIER INSTALLATION AND PERSONAL SAFETY, WE RECOMMEND THAT TWO PEOPLE INSTALL THIS MICROWAVE OVEN.

IMPORTANT: Do not grip or use the handle or heat shield during installation. Do not remove the cardboard spacers between the heat shield and door.


**NOTE:** If your cabinet is metal, use the nylon grommet around the power cord hole to prevent cutting of the cord.

**NOTE:** We recommend using filler blocks if the cabinet front hangs below the cabinet bottom shelf.


IMPORTANT: If filler blocks are not used, case damage may occur from overtightening screws.

**NOTE:** When mounting the microwave oven, thread power cord through hole in bottom of top cabinet. Keep it tight throughout Steps 1–3. Do not pinch cord or lift oven by pulling cord.


1 Lift microwave, tilt it forward, and hook slots at back bottom edge onto four lower tabs of mounting

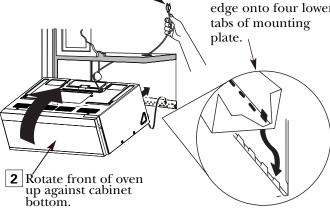


Insert a self-aligning screw through top center cabinet hole. Temporarily secure the oven by turning the screw at least **two full turns**fter the threads have engaged. (It will be completely tightened later.) Be sure to keep power cord tight. Be careful not to pinch the cord, especially when mounting flush to bottom of cabinet.

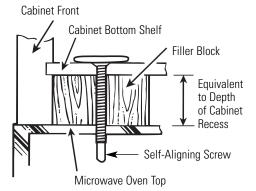

- **4** Attach the microwave oven to the top cabinet.
  - Insert 2 self-aligning screws through outer top cabinet holes. Turn two full turns on each screw.

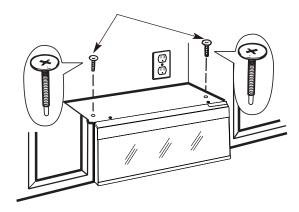

**6** Tighten the outer two screws to the top of the microwave oven. (While tightening screws, hold the microwave oven in place against the wall and the top cabinet.)



7 Install grease filters. See the Use & Care manual packed with the microwave.

IMPORTANT: Remove the cardhoard spacers between heat shield and door.

## C


#### **OUTSIDE TOP EXHAUST (Vertical Duct)**

#### **INSTALLATION OVERVIEW**


- C1. Attach Mounting Plate to Wall
- C2. Prepare Top Cabinet
- **C3.** Adapting Microwave Blower for Outside Top Exhaust
- C4. Check Damper Operation
- C5. Mount Microwave Oven
- C6. Adjust Exhaust Adaptor
- C7. Connect Ductwork

#### **IMPORTANT NOTES:**

- Make sure the screws for the blower motor and blower plate are securely tightened when they are reinstalled. This will help to prevent excessive vibration.
- Make sure the motor wiring has been properly routed and secured, and that the wires are not pinched.

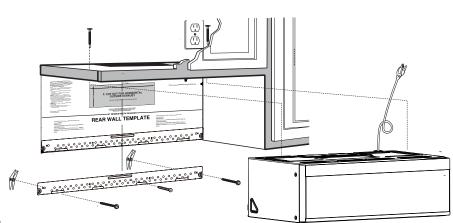


# C1. ATTACH THE MOUNTING PLATE TO THE WALL

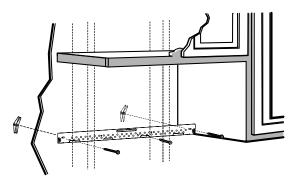

Attach the plate to the wall using toggle bolts. At least one wood screw must be used to attach the plate to a wall stud.

- **1** Remove the toggle wings from the bolts.
- Insert the bolts into the mounting plate through the holes designated to go into drywall and reattach the toggle wings to ¾" (19 mm) onto each bolt.

#### To use toggle bolts:

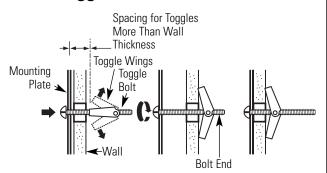

Place the mounting plate against the wall and insert the toggle wings into the holes in the wall to mount the plate.


**NOTE:** Before tightening toggle bolts and wood screw, make sure the bottom of the mounting plate touch the bottom of the cabinet when pushed flush against the wall and that the plate is properly centered under the cabinet.

**CAUTION:** Be careful to avoid pinching fingers between the back of the mounting plate and the wall.

Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.

# C2. USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET

You need to drill holes for the top support screws, a hole large enough for the power cord to fit through, and a cutout large enough for the exhaust adaptor.

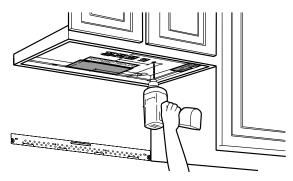


- Read the instructions on the TOP CABINET TEMPLATE.
- Tape it underneath the top cabinet.
- Drill the holes, following the instructions on the TOP CABINET TEMPLATE.


**CAUTION:** Wear safety goggles when drilling holes in the cabinet bottom.

# C3. ADAPTING MICROWAVE AIR DIRECTOR FOR OUTSIDE TOP EXHAUST


Remove the screw that holds the blower plate to the microwave. Remove the cover plate.

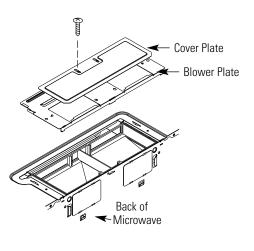

**2** Carefully pull out the air director.

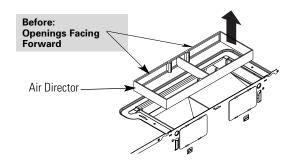


 $\fbox{3}$  Rotate the air director counterclockwise  $180^{\circ}$ 



**4** Place the air director back into the opening.




**5** Replace blower plate with the screw removed in Step 1. Make sure the screw is tight.




# C3. ADAPTING MICROWAVE BLOWER FOR OUTSIDE TOP EXHAUST (cont.)

Attach the exhaust adaptor to the top of the blower plate by sliding it into the guides of the blower plate.

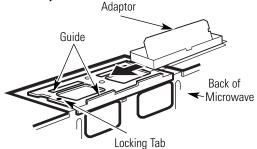

Push in securely until it is in the locking tabs. Take care to assure that the damper hinge is installed so that the damper swings freely.

# C4. CHECK FOR PROPER DAMPER OPERATION

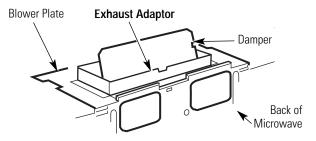

- Make sure tape securing damper is removed and damper pivots easily before mounting microwave.
- You will need to make adjustments to assure proper alignment with your house exhaust duct after the microwave is installed.

## C5. MOUNT THE MICROWAVE OVEN



FOR EASIER INSTALLATION AND PERSONAL SAFETY, WE RECOMMEND THAT TWO PEOPLE INSTALL THIS MICROWAVE OVEN.


IMPORTANT: Do not grip or use the handle or heat shield during installation. Do not remove the cardboard spacers between the heat shield and door.

**NOTE:** If your cabinet is metal, use the nylon grommet around the power cord hole to prevent cutting of the cord.

**NOTE:** We recommend using filler blocks if the cabinet front hangs below the cabinet bottom shelf.

IMPORTANT: If filler blocks are not used, case damage may occur from overtightening screws.


NOTE: When mounting the microwave oven, thread power cord through hole in bottom of top cabinet. Keep it tight throughout Steps 1–3. Do not pinch cord or lift oven by pulling cord.






3 Insert a self-aligning screw through top center cabinet hole. Temporarily secure the oven by turning the screw at least **two full turns**after the threads have engaged. (It will be completely tightened later.) Be sure to keep power cord tight. Be careful not to pinch the cord, especially when mounting flush to bottom of cabinet.


# C5. MOUNT THE MICROWAVE OVEN (cont.)

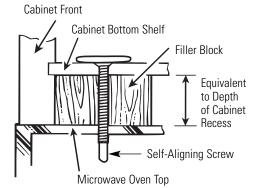

- 4 Attach the microwave oven to the top cabinet.
  - Insert 2 self-aligning screws through outer top cabinet holes. Turn two full turns on each screw.

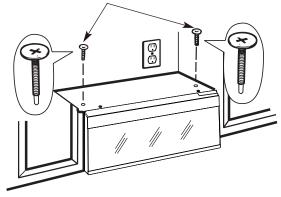


Tighten the outer two screws to the top of the microwave oven. (While tightening screws, hold the microwave oven in place against the wall and the top cabinet.)




**8** Install grease filters. See the Use & and Care packed with the microwave.

## C6. ADJUST THE EXHAUST ADAPTOR

Open the top cabinet and adjust the exhaust adaptor to connect to the house duct.

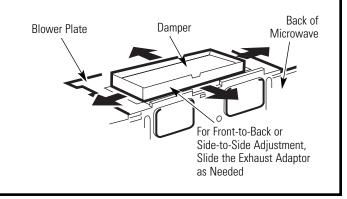





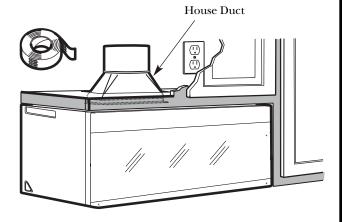

- 1 Extend the house duct down to connect to the exhaust adaptor.
- **2** Seal exhaust duct joints using furnance duct tape for high temperature applications.

#### **BEFORE YOU USE YOUR MICROWAVE**

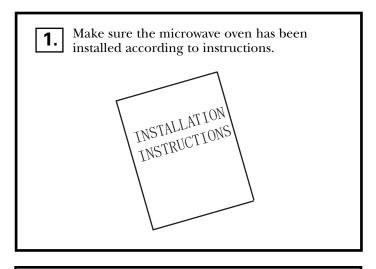

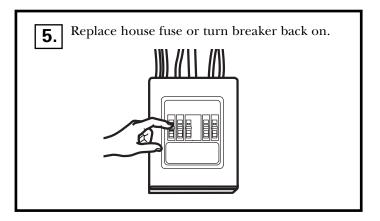

**2.** Remove all packing material from the microwave oven.

